

Replacement of Pump Tube

Replace every 3 months



Step 1
Pull left side of tube out of housing.



Step 2
While rotating clockwise, pull tube towards you.




Step 3
Once tube is clear of pump head, you will now be able to replace the pump tube.



Step 4
Remove the old tube.



Step 5
Fit new pump tube and adjust ties.

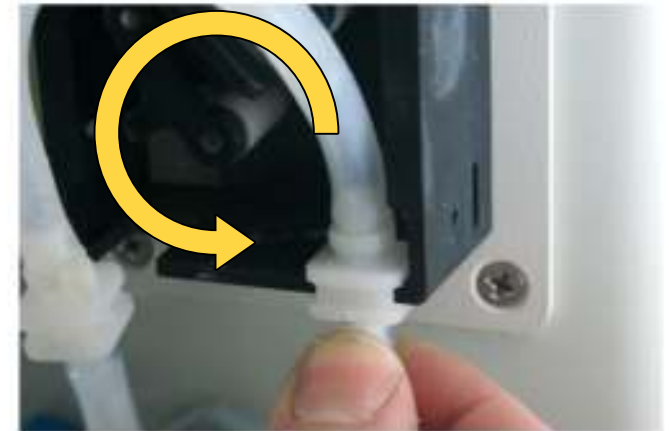

Step 6
Push right side of tube into housing, and turn pump head anti-clockwise.